

CF40-S160 13' Tall Spiral Show Flag + Telescopic Pole

Instructions

Step 1:

Extend telescopic pole sections completely and secure by twisting tightly. It is recommended to tape the sections or take down the pole during heavy winds.

Step 2:

Slide flag onto pole until top cord can reach the tip of the pole.

Step 3:

Tie cord onto top ring tip so flag can hand hang freely.

Step 4:


Place flag on stand (optional) or onto included ground stake and PVC adapter. Caution: Avoid high voltage wires and machinery. Give flag enough room to move during normal windy conditions.

Step 5:

Bottom cord can be used to secure bottom of flag to pole clip if needed.

Questions? Comments?

We are here to help you: 800-336-8977 art@chestnutid.com

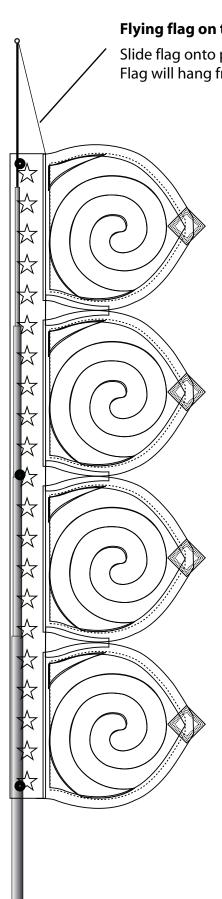

Flying flag on telescopic pole

Slide flag onto pole. Tie cord to top ring. Flag will hang from cord.

Optional - Low / No Wind Bow Setup

We recommend removing the bow during periods of heavy winds or taking own the flag entirely to avoid damage to the panels.

